


Sterilizer Operations

'Left' and 'Right' are used as if you are sitting in drivers seat.

1. Starting & Driving

1. Turn on battery disconnect switch
 - Turn on battery disconnect switch
 2. Turn on 'Control Power'
 - Switch will illuminate green. If it does not, make sure E-stop is not pushed in.
 3. Start Engine using 'Engine Start'
 1. The switch is like a normal key. Off-On-(Crank).
 2. If it does not start, do this: turn off, wait 1 sec, turn on, wait 1 sec, then start.
 3. If at any time the E-Stop is used, it will trigger an alarm on engine controller, and you will hear it beeping. The 'Engine Start' switch must be cycled Off-On-Off to reset the alarm.
 4. Press the Green 'Low Speed mode' button.
 - It is near center of operator panel, with a yellow button above it and red one below it.
 - It will illuminate green once pressed, and only after engine is running.
 - You cannot drive or steer before doing this.
-

Nurse Tank Operations

1. Open both valves
 1. 

From:

<https://www.wiki.brigadetek.com/> - Peter's Wiki

Permanent link:

https://www.wiki.brigadetek.com/public/gnc/operation_manual?rev=1660773942

Last update: 2022/08/17 18:05

