

# Sterilizer Operations

**'Left' and 'Right' are used as if you are sitting in drivers seat.**

---

## 1. Starting & Driving

1. Turn on battery disconnect switch
    - Turn on battery disconnect switch
  2. Turn on 'Control Power'
    - Switch will illuminate green. If it does not, make sure E-stop is not pushed in.
  3. Start Engine using 'Engine Start'
    1. The switch is like a normal key. Off-On-(Crank).
    2. If it does not start, do this: turn off, wait 1 sec, turn on, wait 1 sec, then start.
    3. If at any time the E-Stop is used, it will trigger an alarm on engine controller, and you will hear it beeping. The 'Engine Start' switch must be cycled Off-On-Off to reset the alarm.
  4. Press the Green 'Low Speed mode' button.
    - It is near center of operator panel, with a yellow button above it and red one below it.
    - It will illuminate green once pressed, and only after engine is running.
    - You cannot drive or steer before doing this.
- 

## Nurse Tank Operations

Click pictures for a full size image

1. Open both valves.



- 1.
2. Connect fill hose and power cord.



- 1.
2. Identify the connection bleeder thumbscrew (Red Circle), and fill valve (Green Circle):



From:  
<https://www.wiki.brigadetek.com/> - Peter's Wiki

Permanent link:  
[https://www.wiki.brigadetek.com/public/gnc/operation\\_manual?rev=1660781590](https://www.wiki.brigadetek.com/public/gnc/operation_manual?rev=1660781590)

Last update: **2022/08/17 20:13**

