

Sterilizer Operations

'Left' and 'Right' are used as if you are sitting in drivers seat.

1. Starting & Driving

1. Turn on battery disconnect switch
 - *Turn on battery disconnect switch*
 2. Turn on 'Control Power'
 - *Switch will illuminate green. If it does not, make sure E-stop is not pushed in.*
 3. Start Engine using 'Engine Start'
 1. The switch is like a normal key. Off-On-(Crank).
 2. If it does not start, do this: turn off, wait 1 sec, turn on, wait 1 sec, then start.
 3. If at any time the E-Stop is used, it will trigger an alarm on engine controller, and you will hear it beeping. The 'Engine Start' switch must be cycled Off-On-Off to reset the alarm.
 4. Press the Green 'Low Speed mode' button.
 - It is near center of operator panel, with a yellow button above it and red one below it.
 - It will illuminate green once pressed, and only after engine is running.
 - You cannot drive or steer before doing this.
-

Nurse Tank Operations

Click pictures for a full size image

1. Open both valves.



- 1.
2. Connect fill hose and power cord.



- 1.
2. Identify the connection bleeder thumbscrew (Red Circle), and fill valve (Green Circle):



-
- The fill valve is shown in the open position.
- Check and shut the connection bleeder if open.

From:
<https://www.wiki.brigadetek.com/> - **Peter's Wiki**

Permanent link:
https://www.wiki.brigadetek.com/public/gnc/operation_manual?rev=1660782202

Last update: **2022/08/17 20:23**

